


# Control Parts

## OneTouch™ Control Panel Replacement Parts and Diagram

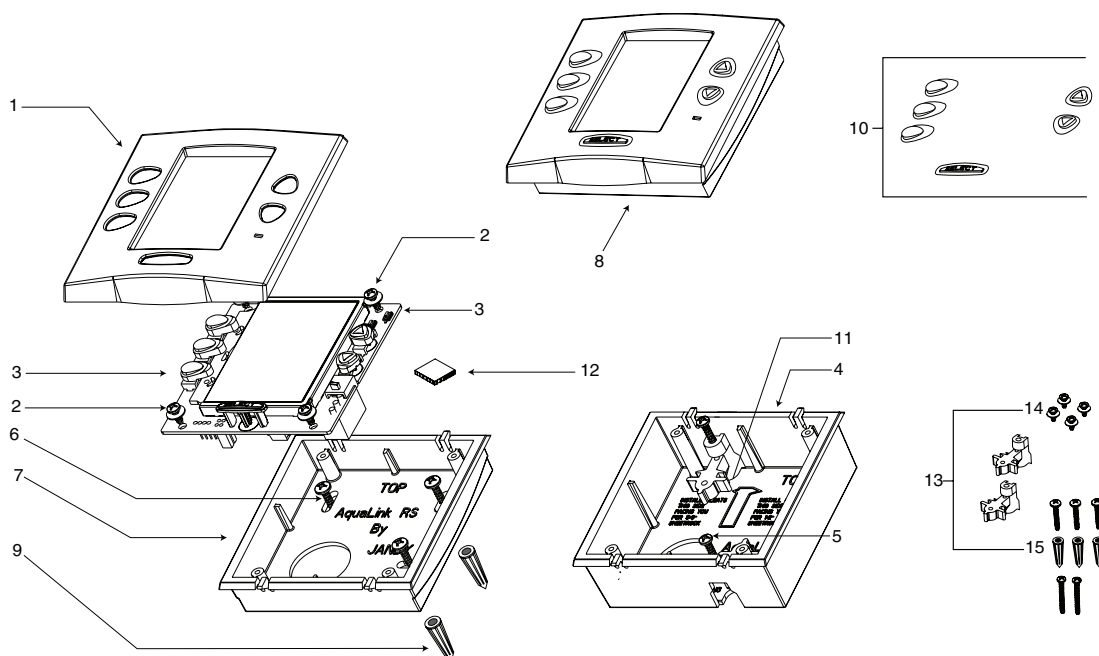

Dwg#	Part#	Description
1	R0550100	OneTouch, Faceplate Only, White
	R0550200	OneTouch, Faceplate Only, Black
	R0550300	OneTouch, Faceplate Only, Satin Chrome
	R0550400	OneTouch, Faceplate Only, Polished Chrome
	R0550500	OneTouch, Faceplate Only, Satin Brass
	R0550600	OneTouch, Faceplate Only, Polished Brass
2	2224	Screw, #6x3/8" Phillips Pan Head, Type BT (Purchase Kit #R0551200)
	4862	Washer, Buna N, 3/8" OD (Purchase Kit #R0551200)
3	R0550700	PCB Subassembly with White Buttons and LCD
	R0550800	PCB Subassembly with Black Buttons and LCD
4	R0550900	Housing, Flush Mount, White
5	3279	Screw, #6x1" Phillips Pan Head, Type A (Purchase Kit #R0551300)
6	1325	Screw, #8x5/8" Philips PNT-A (Purchase Kit #R0551300)
7	R0551000	Housing, Surface Mount, White
	R0551100	Housing, Surface Mount, Black
8	7953	OneTouch Control Panel, Complete, Surface and Flush Mount, White
	7954	OneTouch Control Panel, Complete, Surface and Flush Mount, Black
9	4027	Screw Anchor, Sheet Rock (Purchase Kit #R0551300)
10	R0551400	Replacement Buttons, OneTouch, White
	R0551500	Replacement Buttons, OneTouch, Black
11	7694	Cleat, Flush Mount Sheet Rock Fastener (Purchase Kit #R0551300)
12	8144	OneTouch Controller Chip
13	7952	Mount Kit, RS Controller (Includes 1x Part #R0551200, 1x Part #R0551300, 2x Part #7694
14	R0551200	PCB Screw Kit, OneTouch (Includes 4x Part #2224, and 4x Part #4862)
15	R0551300	Housing Screw Kit, OneTouch (Includes 2x Part #3279, 3x Part #1325, and 3x Part #4027)
N/S	R0551800	Service Controller, One Touch w/10 ft. Cable and Connector