

RECOMMENDED FOR
OUTDOOR USE



SWIMLINE®

Radio Control

Land AND Water Amphibious

SWAMP BUGGY

- Super fast water spraying action!
- Runs on land, water and mud!

CAUTION-ELECTRIC TOY -

Not recommended for children under 5 years of age.

As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.

BATTERY REQUIREMENTS & INSTALLATION:

Please follow all directions. Swamp Buggy Requires the following batteries:

- At least one 9.6-volt rechargeable nickel-cadmium (NI-Cd) or nickel-metal hydride (NI-MH) battery pack and battery pack charger (Swimline Item# 9126, sold separately).
- One 9-volt battery for the transmitter.

WARNING: Dispose of batteries promptly and properly. Do not burn or bury them.

CAUTION:

- Use only fresh batteries of the required size and recommended type.
- If you do not plan to use the Swamp Buggy for a week or more, remove the batteries from the transmitter and the Swamp Buggy. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the Swamp Buggy or transmitter.
- Do not charge or recharge the battery pack while it is in the Swamp Buggy.
- After you charge or recharge the battery (4 to 4.5 hours), disconnect it from the charger. Overcharging the battery pack might damage it.
- Parents are recommended that the transformer be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the transformer should not be used until properly repaired.

INSTALLING BATTERIES IN THE TRANSMITTER:

1. Turn ON/OFF on the transmitter to OFF.
 2. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then remove the cover.
 3. Put the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
 4. Replace the cover and secure it with the screw.
- When the transmitter's range decreases, replace its battery.

INSTALLING BATTERIES IN THE SWAMP BUGGY:

Before you use the 9.6-volt battery pack, you must charge it using a battery charger. Follow the charger's directions to charge the battery pack!

1. Turn ON/OFF on the back of the Swamp Buggy to OFF.
2. Turn the latches on the battery compartment cover on top of the Swamp Buggy counter-clockwise until it stops, then lift up and remove the cover.
3. Attach the battery pack's connector to the Swamp Buggy matching connector. Do not force them! They fit together only one way.
4. Carefully tuck the battery wire into the battery compartment, then replace the battery compartment cover and secure it by turning the latches clockwise until it stops.

When the Swamp Buggy moves slowly or not at all, change the 9.6V battery pack or recharge it according to the battery charger's instructions.


RADIO CONTROL DRIVING

1. Turn ON/OFF to ON.
2. Fully extend the antenna on the transmitter and turn OFF/ON on the transmitter to ON. The indicator on the transmitter lights.
3. Use the transmitter's control levers to move and steer the Swamp Buggy.
4. When the Swamp Buggy goes outside the transmitter's control range, it stops. Hold the transmitter as high as possible with the antenna vertical to try to re-establish contact. If you cannot, you must move closer to the Swamp Buggy to control it again, but be careful not to wade into deep water or strong currents.
5. When the batteries begin to lose power, the Swamp Buggy slows down. So you don't lose your Swamp Buggy, guide the Swamp Buggy to shore as soon as you notice it slowing down.
6. When you finish driving the Swamp Buggy, turn OFF/ON on the Swamp Buggy and the transmitter to OFF.

SWAMP BUGGY FUNCTION CONTROLS

Install fully charged rechargeable batteries into the Swamp Buggy battery compartment and transmitter in the correct position as indicated. Install transmitter antenna as indicated. Move power switches located on the top of the Swamp Buggy and front of the transmitter to the "on" positions. Fully extend transmitter antenna. Place Swamp Buggy on the water surface.


- To drive forward, move "Joystick A" + "Joystick B" upward.
- To drive in reverse, move "Joystick A" + "Joystick B" downward.
- To turn right, move "Joystick A" upward + "Joystick B" downward.
- To turn left, move "Joystick B" upward + "Joystick A" downward.

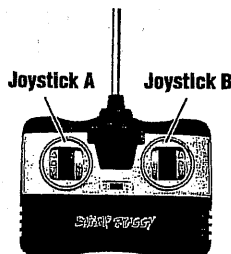

FOR AGES 5 AND UP

Requires one 9-volt battery,
AND one Swimline Item# 9126
9.6-volt rechargeable battery pack
and charger (Not Included)

Swimline Item# 9126
Sold Separately


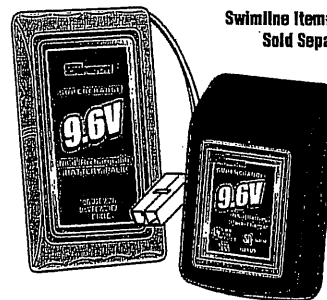


CAUTION:








IMPORTANT: BE SURE TO CHARGE BATTERY PACK 4 TO 5 HOURS BEFORE USING.

- When you disconnect the battery pack from the charger, do not pull on the connector's wires. You might damage the battery pack.
- Do not recharge a battery pack immediately after use (while it is still hot). Allow it to cool first.
- Make sure the battery compartment cover is securely fastened to the buggy before moving it.
- Do not use the battery charger in wet or hot areas.
- Be sure the transmitter's antenna is retracted before turning it off.

TRANSMITTER

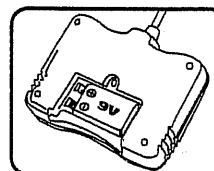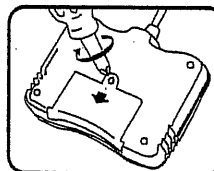

SWAMP BUGGY POWER SWITCH & LATCHES

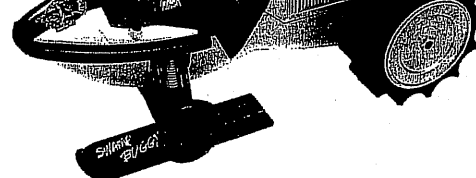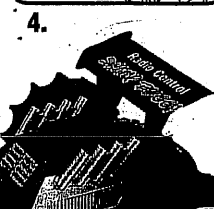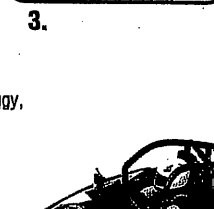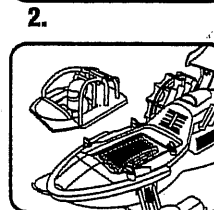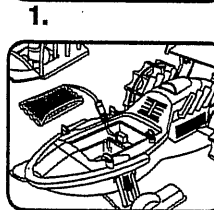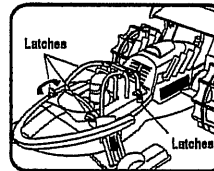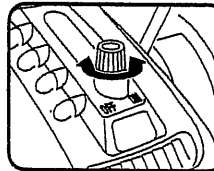

Helpful hints for maintenance and performance.

- 1- Check batteries frequently.
- 2- Check battery terminals for contact.
- 3- Always switch off when not in use.
- 4- Run on smooth level surfaces.

ITEM #9124

All Rights World-wide Reserved
SWIMLINE by International Leisure Products
Edgewood, NY 11717

CAUTION: NOT SUITABLE FOR CHILDREN UNDER
36 MONTHS DUE TO SMALL PARTS
MADE IN CHINA