## MiniMax<sup>®</sup> Plus Outdoor Vent and Indoor Drafthood Kit Owner's Manual

# IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL INSTRUCTIONS SAVE THESE INSTRUCTIONS

### **AWARNING**

Before installing this product, read and follow all warning notices and instructions accompanying this heater kit. Failure to follow safety warnings and instructions can result in severe injury, death, or property damage. Call 1-800-831-7133 for additional free copies of these instructions.

## **Important Notice**




Attention Installer.


This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner/operator of this equipment.



Because **reliability** matters most ®

#### Pentair Water Pool and Spa, Inc.

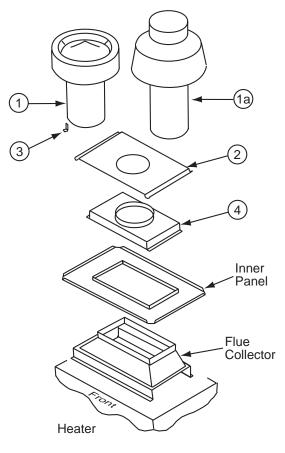

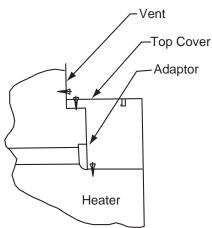

#### **Outdoor Vent Kit includes:**

lte	em	Quantity
1	Outdoor Stack	1
2	Top Cover	1
3	"L" brackets	3
4	Flue adaptor	1
-	#8 x 1/4" s.m. screws	6
-	#8 x 1/2" s.m. screws	2

#### Indoor Drafthood Kit includes:

Item		Quantity
1a	Indoor Drafthood	1
2	Top Cover	1
4	Flue adaptor	1
-	#8 x 1/4" s.m. screws	6
_	#8 x 1/2" s.m. screws	2

#### Tools needed:

Drill 3/32" drill bit 1/4" nut driver

**The MiniMax Plus** heater is shipped as an outdoor stackless unit. To install the outdoor vent (stack) or indoor drafthood kit:

- 1. Take out the louvered (outdoor) vent top assembly, after first removing all sheet metal screws fastening it to the cabinet.
- 2. Place the flue adaptor (#4) over the flue collector. Temporarily, put the top cover (#2) on the heater. Center the flue adaptor the stack hole on the top cover (#2). Remove the top cover, without disturbing the flue adaptor, and with the #8 x 1/2" drill kwik screws provided fasten the adaptor to the inner panel.
- 3. Replace the top cover (#2) on the heater cabinet.
- 4. Install the vent stack (#1), or indoor drafthood (1a), over the flue adaptor's top ring.
- 5. Position the "L" (#3) brackets to fasten the outdoor stack to the top cover (#2), and using the 3/32 drill bit and using the brackets as a guide, drill pilot holes on the stack and top cover, (see illustration).
- 6. Secure the vent stack (#1), or drafthood (1a), to the top cover (#2) using the provided #8 x 1/4" sheet metal screws through the "L" (#3) brackets.
- 7. Fasten the cabinet side inspection plates to the holes on the ends of the top cover (#2) using six of the painted sheet metal screws removed in Step 1. The top cover (#2) holes should align with the holes in the side inspection plates if they do not revolve the top cover through 180 degrees.

## SAVE THESE INSTRUCTIONS

Pentair Water Pool and Spa, Inc.

1620 Hawkins Ave., Sanford, NC 27330 • (919) 566-8000 10951 West Los Angeles Ave., Moorpark, CA 93021 • (805) 553-5000

