

RETROJET INSTALLATION GUIDE

For replacing: A&A Quikclean1, A&A Quikclean2, A&A Quikclean Gamma 3, Caretaker 99, Caretaker 99 Threaded, Net'N'Clean and Pool Valet



UNIVERSAL IN-FLOOR NOZZLE REPLACEMENTS

This installation guide walks you through the steps involved in removing an existing cleaning nozzle and properly installing a new Retrojet.

For technical assistance call 1.800.621.5886 or contact your regional representative

1



Use removal tool made for existing nozzle to remove one nozzle at a time by rotation 1/4 turn counter clockwise to unlock. The system is hydraulically balanced, so the same size nozzle needs to go back into the appropriate hole.

2



Check the size of the opening on the existing nozzle and then select the closest RetroJet cap from the pack of three provided in the replacement kit.

RETROJET INSTALLATION GUIDE

For replacing: A&A Quikclean1, A&A Quikclean2, A&A Quikclean Gamma 3, Caretaker 99, Caretaker 99 Threaded, Net'N'Clean and Pool Valet



UNIVERSAL IN-FLOOR NOZZLE REPLACEMENTS

This installation guide walks you through the steps involved in removing an existing cleaning nozzle and properly installing a new Retrojet.

For technical assistance call 1.800.621.5886 or contact your regional representative

1



Use removal tool made for existing nozzle to remove one nozzle at a time by rotation 1/4 turn counter clockwise to unlock. The system is hydraulically balanced, so the same size nozzle needs to go back into the appropriate hole.

2



Check the size of the opening on the existing nozzle and then select the closest RetroJet cap from the pack of three provided in the replacement kit.




Place the selected cap over the the top of the RetroJet nozzle and press firmly against a hard surface. You will hear a snap when the pieces have properly locked together.



Press the top of the complete RetroJet nozzle onto the three prongs of the RetroJet installation tool*. Guide the nozzle into the hole in the pool floor and then rotate clockwise 1/4 turn to lock in place.



Place the selected cap over the the top of the RetroJet nozzle and press firmly against a hard surface. You will hear a snap when the pieces have properly locked together.

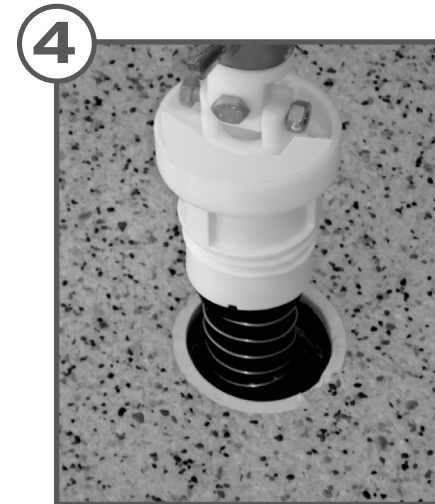

Press the top of the complete RetroJet nozzle onto the three prongs of the RetroJet installation tool*. Guide the nozzle into the hole in the pool floor and then rotate clockwise 1/4 turn to lock in place.



Allow the nozzle to cycle through the cleaning process to ensure that it was installed properly.



Allow the nozzle to cycle through the cleaning process to ensure that it was installed properly.